

# heatmiser®



Model: **DT-W**

Model: DT-W



## Table of Contents

Product Image	1
Table of Contents	2
What is a Room Thermostat?	3-4
Installation Procedure	5-6
Installing the Batteries	7-8
Replacing the Batteries	9
Pairing with the RC1-W Receiver	10-11
Pairing with the UH1-W Wiring Centre	11-12
LCD Display	13-14
Temperature Display	15
Locking the Thermostat	16
Setting the Temperature	16
Frost Protection	17
Power On / Off	17
Re-calibrating the Thermostat	18
Factory Reset	18
Optional Features	19-22



## What is a Room Thermostat?

A room thermostat simply switches the heating system on and off as necessary.

It works by sensing the air temperature, switching on the heating when the air temperature falls below the thermostat setting, and switching it off once this set temperature has been reached.

Setting a room thermostat to a higher temperature will not make the room heat up any faster. How quickly the room heats up depends on the design & size of the heating system.

Similarly reducing the temperature setting does not affect how quickly the room cools down. Setting a programmable room thermostat to a lower temperature will result in the room being controlled at a lower temperature, and saves energy.

The way to set and use your room thermostat is to find the lowest temperature settings that you are comfortable with, and then leave it alone to do its job.

The best way to do this is to set the room thermostat to a low temperature – say 18°C, and then turn it up by 1°C each day until you are comfortable with the temperature. You won't have to adjust the thermostat further. Any adjustment above this setting will waste energy and cost you more money.

If your heating system is a boiler with radiators, there will usually be only one room thermostat to control the whole house. But you can have different temperatures in individual rooms by installing thermostatic radiator valves (TRVs) on individual radiators.

If you don't have TRVs, you should choose a temperature that is reasonable for the whole house. If you do have TRVs, you can choose a slightly higher setting to make sure that even the coldest room is comfortable, then prevent any overheating in other rooms by adjusting the TRVs.

Room thermostats need a free flow of air to sense the temperature, so they must not be covered by curtains or blocked by furniture. Nearby electric fires, televisions, wall or table lamps may also prevent the thermostat from working properly.



## Installation Procedure



**Do**  
Mount the thermostat at eye level.  
Read the instructions fully so you get the best from our product.



**Don't**  
Do not install near to a direct heat source as this will affect functionality.  
Do not push hard on the LCD screen as this may cause irreparable damage.

*This wireless thermostat is designed to be surface mounted.*

### Step 1

Carefully separate the front half of the thermostat from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the thermostat.

### Step 2

Mark 2 hole positions on the wall using the backplate as a positioning template. Drill at the marked positions and insert a wall plug into each hole.

### Step 3

Screw the thermostat back plate securely on the wall.

### Step 4

Clip the front of the thermostat back onto the thermostat back plate.





## Installing the Batteries

2x AAA batteries have been supplied with this thermostat.

To access the battery holder, push and release the compartment door located on the bottom face of the thermostat.



Insert the batteries in the empty battery holder, ensuring that each battery is orientated for the correct polarity + / - .

Push the battery holder back inside the thermostat until it is secured in its closed position.




## Replacing the Batteries

Batteries have a fixed lifespan and will need to be replaced occasionally to ensure the thermostat operates correctly.

The thermostat will inform you when the batteries need to be replaced by displaying the battery icon on screen.

*Note: You must replace the batteries within 1 minute of removal in order to retain the current settings.*

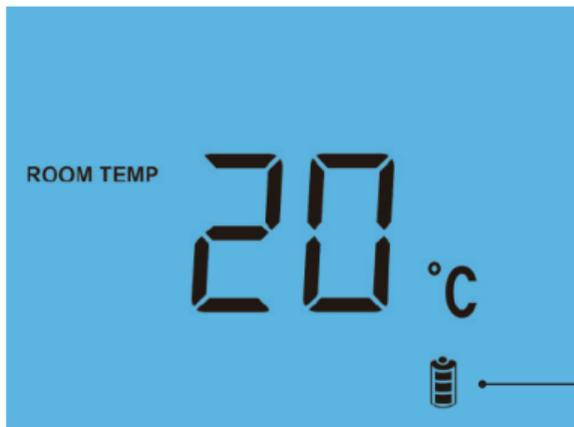

Battery Icon  
(Flashes)



## Pairing With the RC1-W Receiver

If using with the UH1-W wiring centre, turn to page 11.

With the thermostat turned OFF:

- Press & hold the Clock button until you see two sets of numbers appear ...
- The small number 01 in the top right corner of the LCD is the feature number.
- Press Clock repeatedly until you see feature 06 (Receiver Type) .....   
*The options within feature 06 are: 00 = UH1-W or 01 = RC1-W receiver.*
- Use the Up/Down keys to set feature 06 to 01 (RC1-W) .....
- Press Clock again until you see feature 07 (Receiver Address) .....
- You can now select a Receiver Address from 01-32.
- Use the Up/Down keys to set feature 07 to 01 .....   
*(You must set a unique receiver address for each receiver installed).*
- Press Clock again until you see feature 08 (Zone number) .....
- You are able to connect two DT-W thermostats to one RC1-W receiver.
- Use the Up/Down keys to select the zone this thermostat controls (01 or 02) .....
- Press A to confirm settings and the display will go blank .....



## Pairing the Thermostat

- On the receiver, press and hold the Pairing button until the Comms LED lights up.
- With the thermostat turned OFF, press & hold the A button for 5 seconds ..... 
- The thermostat will send a signal for 1 minute and will flash the RF signal icon ... 
- If pairing is successful, the Comms LED on the receiver will flash.
- Press the Power button on the thermostat once to confirm pairing ..... 

If pairing is unsuccessful, check features 06 to 08 have been configured correctly. To eliminate a possible signal issue, reposition the thermostat closer to the receiver and repeat the pairing process again.



## Pairing With the UH1-W Wiring Centre

On the UH1-W wiring centre, take note of the number set on the rotary switch (Board ID number 1-9).




Each UH1-W on the system needs to have a different ID number.

With the thermostat turned OFF:

- Press & hold the Clock button until 2 sets of numbers appear on screen ..... 
- The small number 01 in the top right corner of the LCD is the feature number.

- Press Clock repeatedly until you see feature 06 (Receiver Type) .....   
*The options within feature 06 are: 00 = UH1-W or 01 = RC1-W receiver.*
- Use the Up/Down keys to set feature 06 to 00 (UH1-W) .....  
- Press Clock again until you see feature 07 (UH1-W Board Address) ..... 
- Use the Up/Down keys to set the large digits to the board address of the UH1-W. This is the number set on the UH1-W rotary switch...    
*(You must set a unique board address for each UH1-W installed).*
- Press Clock again until you see feature 08 (Zone number, 01-08) ..... 
- The UH1-W is an 8 zone receiver.  
Use the Up/Down buttons to select the zone this thermostat should be linked to .....  
- Press Clock again until you see feature 09 .....   
*(00 = Underfloor heating, 01 = Radiators.)*
- Use the Up/Down buttons to specify whether the thermostat is controlling underfloor heating or radiators .....  
- Press A to confirm settings and the display will go blank ..... 
- Press the Power button once to turn the thermostat back ON ..... 
- Press the Up key to set the target temperature above the room temperature; the flame symbol will appear and the assigned zone on the UH1-W will be activated .....   
This indicates pairing between the thermostat and the UH1-W is successful.

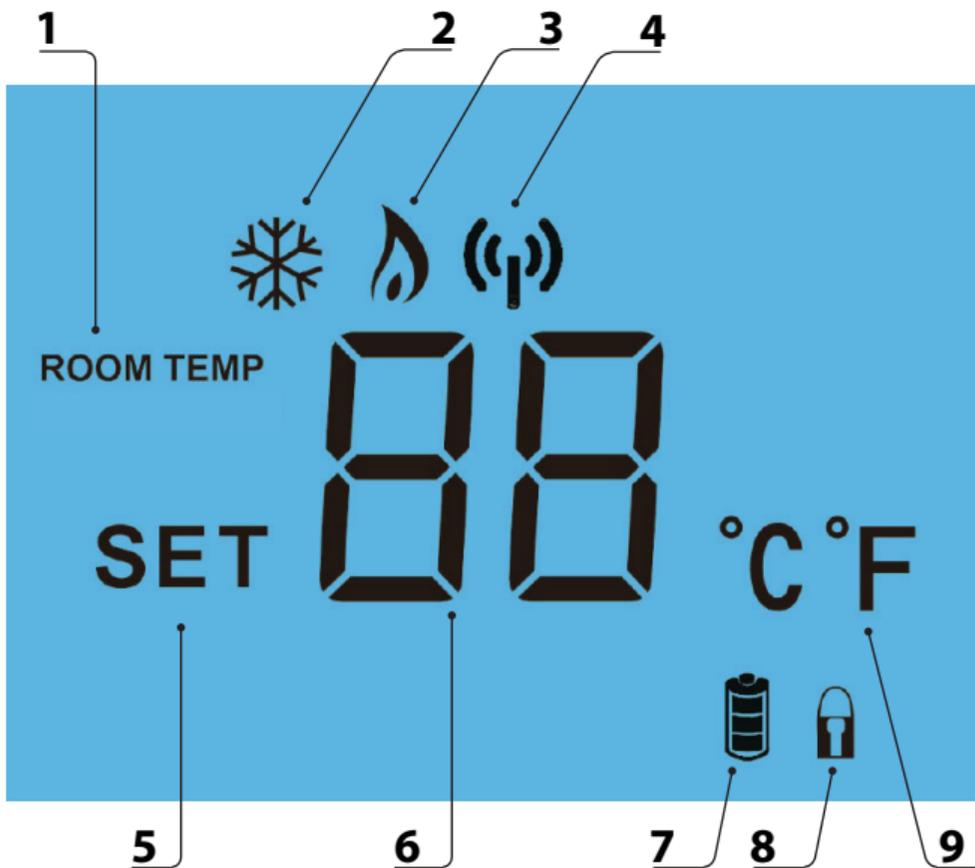


## LCD LCD Display

1. Room Temp - Indicates the current temperature sensor mode.
2. Frost Icon - Displayed when the thermostat is in frost protection mode.
3. Flame Icon - Displayed when the thermostat is calling for heat.
4. RF Icon - Flashes when the thermostat communicates with the receiver.
5. Set - Indicates when changes are being made to the temperature set point.
6. Current Temp - Indicates the current sensor temperature.
7. Battery Level - Indicates when the batteries require replacement.
8. Keypad Lock Indicator - Displayed when the keypad is locked.
9. Units of Temperature - Degrees Celsius or Fahrenheit.

## Temperature Display

The temperature display information is driven by two different inputs; the sensor measurement and the target temperature you have set.

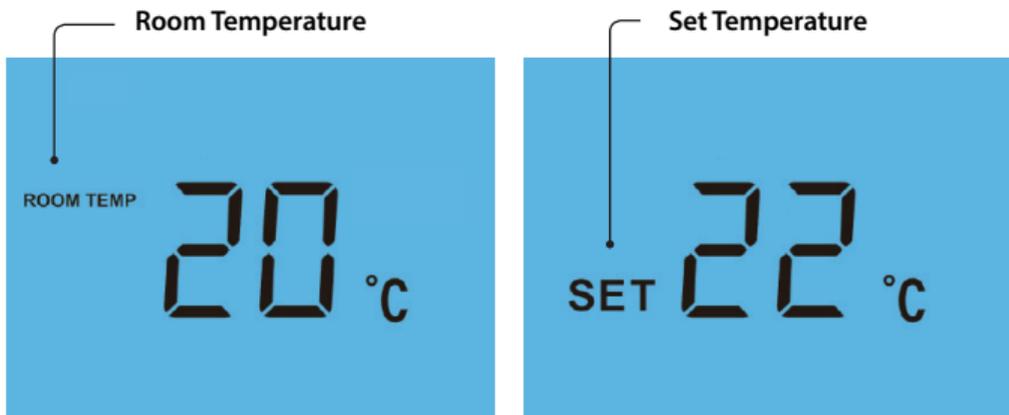

This is the current room temperature.

This is the temperature you are trying to achieve in your home.

## Locking the Thermostat

The thermostat has a keypad lock facility. To activate the lock follow these steps.

- Press and hold the A and Down keys together for 10 seconds ..... 
- You will see the lock symbol appear on screen ..... 
- To unlock, repeat the steps above until the lock symbol disappears.

*Note: The keypad lock indicator is only displayed when the lock is active.*

## Temperature Control

The Up/Down keys allow you to adjust the set temperature ..... 

When you press either key, you will see the word SET and the desired temperature will be displayed on screen.

Use the Up/Down keys to adjust the SET value ..... 

Press A to confirm settings and return to main display ..... 



## Frost Mode

Pressing the Power button  once will place the thermostat in frost protect mode.

In this mode, the thermostat will display the frost icon and will only turn the heating on should the room temperature drop below the set frost temperature (see page 19).

Should the heating be turned on whilst in frost mode, the flame icon will be displayed.

To cancel the frost protect mode, press the Power button once again. 



## Heating On/Off

The heating is indicated ON when the flame icon is displayed.

When the flame icon is absent, there is no requirement for heating to achieve the set temperature but the thermostat remains active.

To turn the thermostat OFF completely, press and hold the Power button..... 

The display and heating output will be turned OFF completely.\*

Press the Power button once to turn the thermostat back ON ..... 

*\*See Feature 3 on page 19*



## Re-calibrating the Thermostat

If you need to re-calibrate the thermostat, follow these steps.

- Press and hold the Power button to turn the thermostat OFF ..... 
- Press and hold BOTH the Power and Down keys together until the temperature appears on the screen .....  
- Use the Up/Down keys to configure the new temperature .....  
- Press A to confirm settings ..... 
- Press the Power button once to turn the thermostat back ON ..... 



## Factory Reset

The thermostat has a reset function to restore all settings to their factory defaults.

To perform a factory reset, follow these steps.

- Press and hold the Power button to turn the thermostat OFF ..... 
- Press and hold the Power and Up keys together until the LCD powers up. All of the icons will be displayed on screen .....  
- When the icons have disappeared from the screen, the thermostat has been successfully reset.
- Press the Power button once to turn the thermostat back ON ..... 



## Optional Features Explained

THE FOLLOWING SETTINGS ARE OPTIONAL AND IN MOST CASES NEED NOT BE ADJUSTED

**Feature 01 - Temperature Format:** This function allows you to select between °C and °F.

**Feature 02 – Switching Differential:** This function allows you to increase the switching differential of the thermostat. The default is 1°C which means that with a set temperature of 20°C, the thermostat will switch the heating on at 19°C and off at 20°C. With a 2°C differential, the heating will switch on at 18°C and off at 20°C.

**Feature 03 – Frost Protect:** You can set whether the thermostat will maintain the frost temperature when the thermostat display is turned off. As a default, this is enabled.

**Feature 04 – Frost Protect Temperature:** This is the temperature maintained when the thermostat is in frost mode. The range is 07 - 17°C. The default is 12°C and is suitable for most applications.

**Feature 05 – Output Delay:** To prevent rapid switching, an output delay can be entered. This can be set from 00 - 15 minutes. The default is 00 which means there is no delay.

**Feature 06 – UH1-W or RC1-W receiver:** The thermostat can work with our UH1-W 8 zone wiring centre or RC1-W 2 channel receiver. This setting determines which is being used.

**Feature 07 – Receiver Address:** Within one building, up to 9 UH1-W's or 32 RC1-W's can be used. Each receiver must have a unique receiver address (01-32).

**Feature 08 – Zone Number:** This is the zone number you are assigning the thermostat to on either the UH1-W or the RC1-W receiver. 01 - 08 - UH1-W, 01 - 02 – RC1-W

**Feature 09 – Underfloor Heating or Radiator Zone (UH1-W Only):**

This setting determines whether the thermostat will activate the pump & boiler output on the UH1-W. If set to 00 the outputs will be activated. 00 = UFH, 01 = Radiators

**Feature 10 – Fail Safe:** If enabled, the thermostat will send a signal to the receiver every 20 minutes. Should the receiver fail to receive two signals, the receiver will activate the output for 20% of the time. This is to protect the system against a loss of wireless signal and in case the thermostat battery fails whilst you are away.


**Feature 11 – Up/Down Temperature Limit:** This function allows you to limit the use of the up and down keys. This limit is also applicable when the thermostat is locked and so allows you to give others limited control of the heating system.



## Adjusting the Optional Settings

To adjust the optional settings, follow these steps.

- Press and hold the Power button to turn the thermostat OFF ..... 
- Press and hold the Clock button until the display appears as shown below ... 

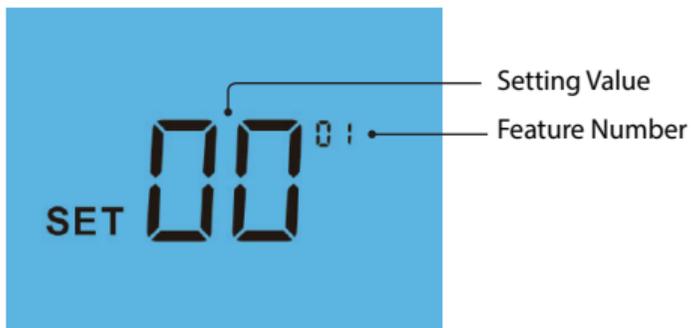

- Use the Clock button to cycle through the features ..... 
- Use the Up/Down keys to change the setting ..... 
- Press A to confirm settings ..... 
- Press the Power button once to turn the thermostat back ON ..... 



## Optional Settings - Feature Table

FEATURE	DESCRIPTION	SETTING
01	Temperature Format	00 = °C 01 = °F (°C = Default)
02	Switching Differential	01° - 03°C (01°C = Default)
03	Frost Mode	00 = Disabled 01 = Enabled (01 = Default)
04	Frost Protection Temperature	07° - 17°C (12°C = Default)
05	Output Delay	00 - 15 Minutes (00 = Default)
06	UH1-W or RC1-W Receiver	00 = UH1-W, 01 = RC1-W (00 = Default)
07	Receiver Board Address	UH1-W = 01-09, RC1-W = 01-32, (00 = Default)
08	Zone Number	UH1-W = 01-08, RC1-W = 01-02
09	Underfloor Heating or Radiator (UH1-W Only)	Underfloor Heating = 00, Radiator Zone = 01
10	Fail Safe	00 = Disabled, 01 = Enabled (01 = Default)
11	Up/Down Limit	00° - 10°C (00°C = Default)



**Heating Professionals:**  
Request a copy of our product installation guide containing detailed technical specifications for our complete product range:  
[www.heatmiser.com/guide](http://www.heatmiser.com/guide)

## Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:  
[www.heatmiser.com](http://www.heatmiser.com)



PDF



FAQ



Video



Twitter: [heatmiseruk](https://twitter.com/heatmiseruk)



Facebook:  
[facebook.com/thermostats](https://facebook.com/thermostats)