

heatmiser®



Model: **TM1-TS WiFi**



Table of Contents

Product Image	1	Locking the Time Clock	15
Table of Contents	2	Holiday Programming	16
Installation Procedure	3-4	Programming 5/2 Day & 7 Day Time Clock Mode	17-18
LCD Display	5-6	Setting Countdown Mode	19
WiFi Setup	7-9	Time Clock Override	20
Security Types and Compatibility	9-10	Factory Reset	21-22
Remote Access Via Web App	11	Optional Features Explained	23
Remote Access Via Web Browser	11	Wiring Diagram	24-25
Setting the Clock	12	Notes	26
Operating Modes	13		
Setting the Operating Mode	14		
Clean Screen	15		



Installation Procedure



Do
Mount the time clock at eye level.
Read the instructions fully so you get the best from our product.



Don't
Do not install near to a direct heat source as this will affect functionality.
Do not push hard on the LCD screen as this may cause irreparable damage.

This time clock is designed to be flush mounted and requires a back box of 35mm (minimum depth) to be sunk into the wall prior to installation.

Step 1

Carefully separate the front half of the time clock from the back plate by placing a small flat head terminal driver into the slots on the bottom face of the time clock.

Step 2



Place the time clock front somewhere safe.
Terminate the time clock as shown in the diagram on pages 24-25 of this booklet.


Step 3

Screw the time clock back plate securely into the back box.

Step 4

Clip the front of the time clock back onto the time clock back plate.

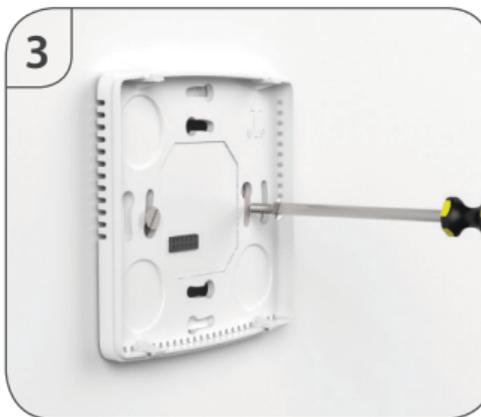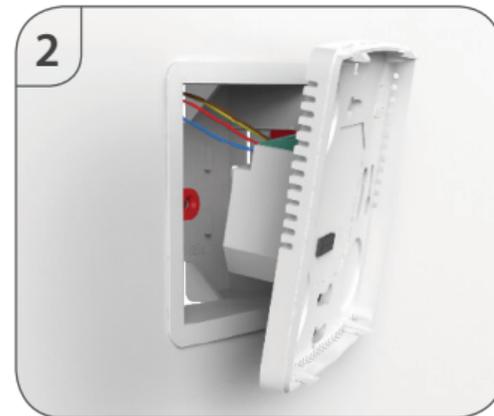

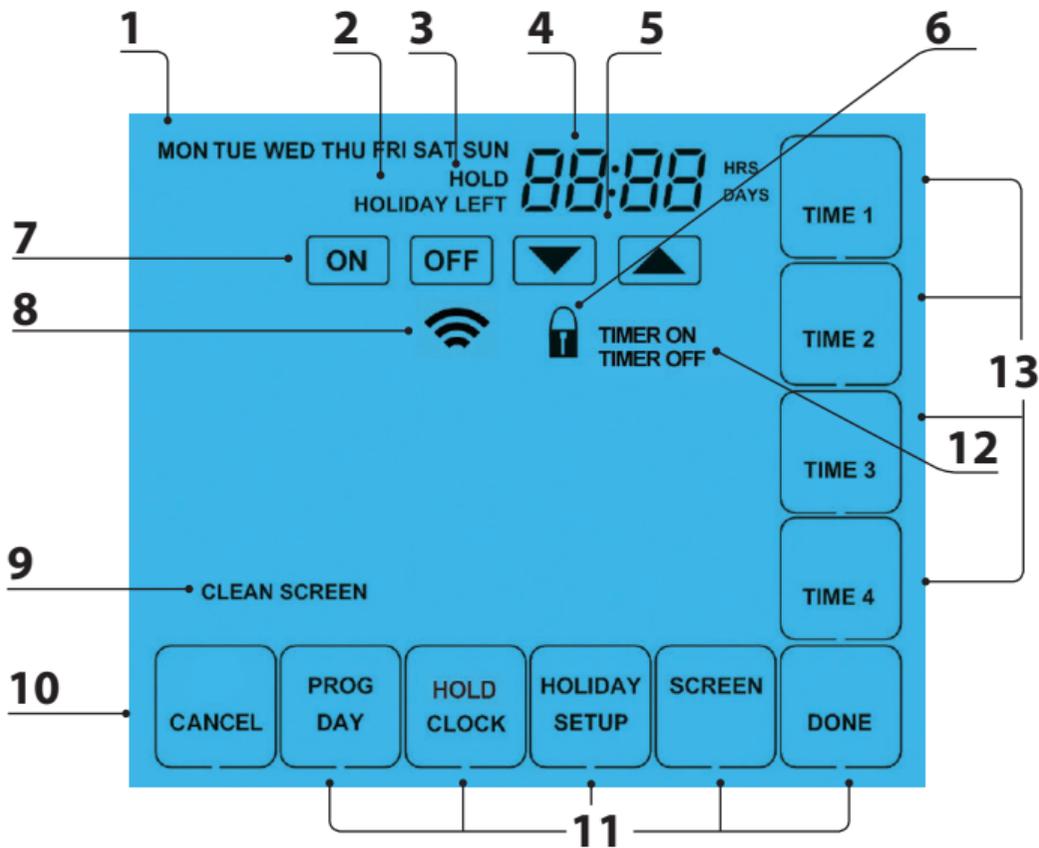

LCD LCD Display

1. Day Indicator - Displays the day.
2. Holiday Indicator - Displayed when the time clock is in Holiday mode.
3. Output Hold - Displayed when the time clock is in Hold mode.
4. Clock - Displays time in normal operation, time left in hold or days left in holiday mode.
5. Up/Down Keys - Increase or decrease values shown on top digit group.
6. Keypad Lock Icon - Displayed when the keypad is locked.
7. ON/OFF Keys - Use to override the timed output. Press and hold OFF to turn the display off.
8. WiFi Icon - Displayed when a WiFi connection is established.
9. Clean Screen - Freezes screen temporarily to enable cleaning.
10. Cancel - Used to exit setup/program operations.
11. Setup/Programming Keys - Used to navigate setup options.
12. Timer Status - Displays the current status of the timed output.
13. Comfort Level Selection Keys - Used in comfort level setup (see page 17).



Setting Up Your WiFi Time Clock

Step 1:

Download and install the WiFi thermostat setup utility from our web site:
www.heatmiser.co.uk/wifi

Step 2:

Connect the time clock to your PC with the USB cable provided. This will power the time clock through the USB port and will allow you to test the WiFi connection. Open the setup utility and press Read to view the current time clock configuration.

Step 3:

Enter the SSID, Security Type and Security Code of your wireless network. These settings can usually be found on the underside of your wireless router. For more information please consult your router manual. See page 11 for additional information on security types and compatibility.

Step 4:

Enter a fixed IP address for your WiFi time clock outside of the router DHCP range. It is likely that your network will be configured to operate on a DHCP basis. This means your router automatically issues an IP address to a device that successfully connects to the network.

Your WiFi time clock needs a fixed IP address in order for local and remote access to operate and you must set this up manually.

Log into your wireless router and navigate to the LAN settings page.

Find and select the DHCP setup details.

This should define the IP range that can be assigned to devices connecting to the network.

As an example, you may have an IP starting range 192.168.1.1 and ending 192.168.1.99. This means you can safely provide your WiFi time clock the IP address 192.168.1.100 as no other devices will be assigned this address by the router.

If your DHCP range is from 192.168.1.1 to 192.168.1.253 you cannot use 254 or above.

You need to change the DHCP range, taking care not to change any of the first 3 numbers.

***Tip!** When setting up an IP address, the first three sets of numbers must be the same as the router IP address and the fourth set must not be used elsewhere on the network.*

Step 5:

Enter the Subnet mask for the network. This information can usually be found on the underside of your wireless router.

Step 6:

Enter the IP address of your gateway and DNS. In most cases, this is the IP address of your wireless router.

If you have a multi-zone system and are using the Multi-Link, the Gateway of the time clock will need to be configured as the IP address of the Multi-Link.

Step 7:

Create a unique username and password that will be used to access your time clock from a web browser.

Default Username: admin

Default Password: admin

Change these settings to your personal preference and record for future use.

A 4 digit access PIN is required to use the smartphone/tablet app and also helps to secure your system.

Step 8:

When you have entered the details of your WiFi network press Apply and disconnect the USB cable, (the time clock LCD should go blank).

Reconnect the USB cable to the WiFi time clock, when the time clock has rebooted it will attempt to connect to your network. This process takes approximately one minute and is complete when the WiFi symbol is displayed on screen.



Security Types and Compatibility

The WiFi time clock operate on the 802.11b standard.

If your router is a G model, you must ensure it is setup to work in B&G mode.

You will not be able to connect to your time clock without changing this setting on G model routers.

There are currently 4 common methods of securing your wireless connection:

OPEN/DISABLED (not recommended)

W.P.A. (medium security)

W.E.P. (lowest security level)

W.P.A.2. (highest security)

Your choice of security settings in the time clock must match the setting in your router. Often you will find WPA and WPA2 are a single option in the router. This is perfectly normal as the router automatically selects the correct security level and you can set the time clock up using either one of these settings.

Passwords can be up to 63 characters in length including spaces _ . / \ characters. The W.E.P. option is not so simple. Some routers generate a hidden password from a pass phrase whilst others require a 10 or 26 digit hex password and won't accept anything else. Your time clock utility can deal with both options but the following restrictions may apply:

A hex password can only be made up of the numbers 0 to 9 and the letters a to f (lower case only).

Hex passwords can only be 10 characters or 26 characters in length.

If a passphrase is used it must be either 5 or 13 characters in length but can be any letter or number.

Your time clock will automatically calculate the same hidden password your router creates from the same phrase.

These restrictions are common to most routers but you should refer to the router manual for specific restrictions that apply to your model.



Remote Access via App

To remotely connect to your WiFi time clock you must forward a port within your router to your WiFi time clock.

As all routers are setup differently, you should consult your user manual or the manufacturer's website for more information.

Generally you should create a new service within your router. Within this service you must open **TCP port 8068**.

Use the port forwarding function to forward the new service to the IP address of your WiFi time clock.



Remote Access via Web Browser

To remotely access your WiFi time clock via a web browser you must first open port 80 and forward this to the IP address of your WiFi time clock.

To connect to your time clock, open your preferred browser and enter the IP address that you gave the time clock during setup and press enter.

You will be asked to enter a password and username.

These are both set to "admin" as default.

We recommend you change these settings to ensure the security of your system.


For further information, click the help link within the browser.



Setting the Clock

To set the clock, follow these steps.

- Press PROG and then CLOCK  
- Use the Down key to set the hours 
- Use the Up key to set the minutes 
- Press the CLOCK key 
- Use the Down key to set the day 
- Use the Up key to set the month 
- Press the CLOCK key 
- Use the Up/Down keys to set the year  
- Press DONE to confirm and exit 

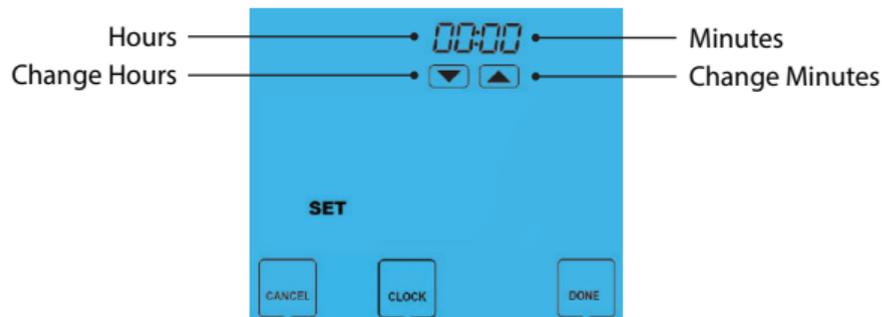

M Operating Modes

The time clock has three main operating modes.

MODE	DESCRIPTION
00	5/2 Day Time Clock In this mode, you can program 4 switching times for the weekdays and 4 different switching times for the weekend.
01	7 Day Time Clock In this mode, you can program 4 switching times for each day of the week.
02	Countdown Timer In this mode, the time clock will activate the output during the countdown period.

The time clock can be used to control various electrical devices in and around your home e.g. lighting, electric towel rails, hot tubs, sauna's etc.


Refer to the manufacturer instructions for wiring to these devices.

Common time clock wiring requirements are shown in the diagram on page 24.

Setting the Operating Mode

To select the mode, follow these steps.

- Press the PROG key
- Press the SETUP key
- Use the Up/Down keys at the top of the screen to select feature number 12
- Use the Up/Down keys in the center to adjust the setting
00 = 5/2 Day, 01 = 7 Day, 02 = Countdown timer.
- Press DONE to confirm settings and exit

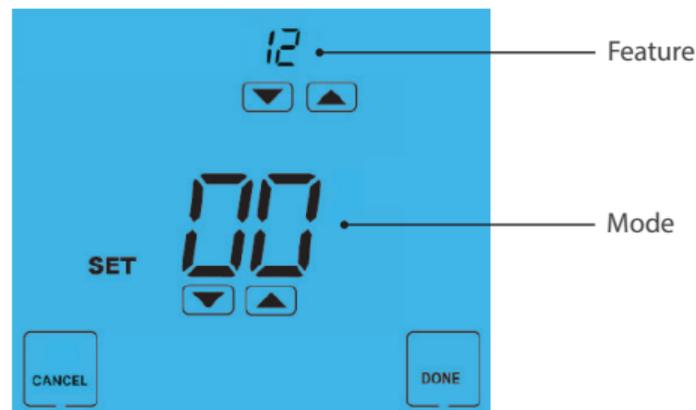



Clean Screen


Pressing **SCREEN** will disable all keys, providing you 15 seconds to wipe the screen clean before the keys are re-activated.



Locking the Keypad

The time clock has a keypad lock facility.

- To activate the lock press the bottom right corner of the display and hold for 10 secs.
- When activated, you will see the Keypad Lock symbol.
- To cancel, press the bottom right corner of the display again for 10 secs.

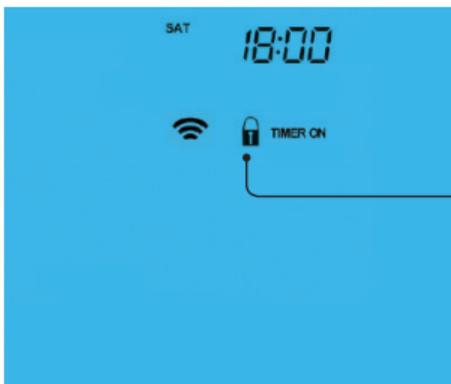

Keypad Lock Indicator




Holiday

During a holiday, the time clock will maintain **TIMER OFF**. At the end of your holiday, the time clock will revert back to the programmed setting.

- Press **HOLIDAY**
- Enter the desired duration in days
- Press **DONE** to confirm and exit

Note: A holiday period does not start until 00:00 the next day. For example, if you set a holiday period on Friday for 2 days, Saturday will be counted as the first day and the time clock will revert back to the programmed schedule at 00:00 on Monday.

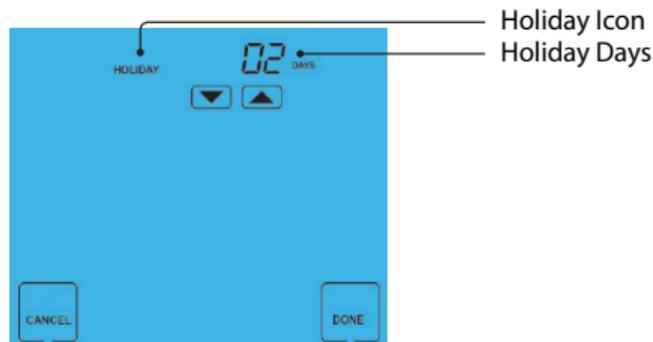

To cancel a Holiday setting, reduce the holiday time to 00 days.

5/2 Programming 5/2 Day and 7 Day Modes

Default switching times are pre-programmed but you can change them easily.

Weekday	On Time	Off Time
Wake	07:00	09:00
Leave	16:00	20:00
Return	--:--	--:--
Sleep	--:--	--:--
Weekend	On Time	Off Time
Wake	07:00	09:00
Leave	16:00	20:00
Return	--:--	--:--
Sleep	--:--	--:--

To set the switching times, follow these steps.

- Press PROG 
- Select TIME 1 
- TIME 1 and ON will flash.
- Use the Up/Down keys to set the ON time for TIME 1 
- Press OFF 

- Use the Up/Down keys to set the OFF time for TIME 1 
- Repeat these steps for the TIME 2, TIME 3 & TIME 4 
- Press DAY to select the next day to program and repeat 



In 5/2 Day mode the time clock will display "Sat Sun" prompting you to program the switching times for the weekend.



In 7 Day mode, the time clock will display Tue.


- When complete, press DONE to confirm settings and exit 



Countdown Mode

- Use the Up/Down keys to set the countdown duration  
- Press DONE to confirm and exit 
- Hold Left will appear showing the time left.

When Hold Left is displayed on screen, the output will be active.

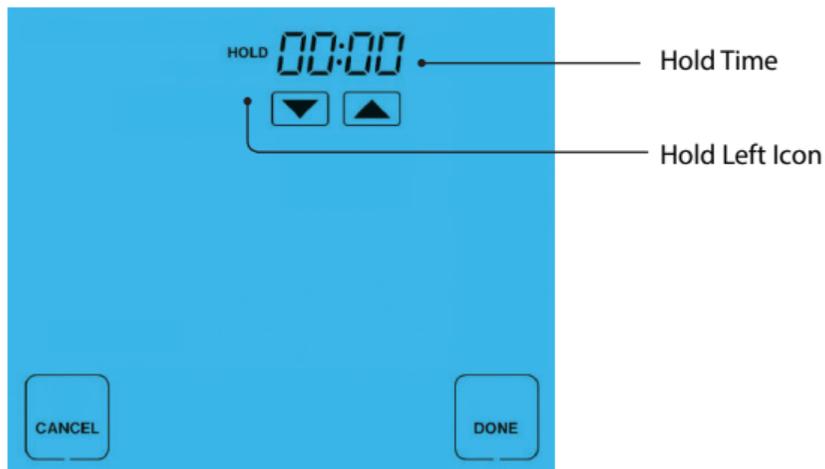

To cancel the Countdown, follow the same steps but reduce the time to 00:00.




Timer Override

The time clock is able to override its current timer status.

- Press HOLD 
- If the timer status is currently on press OFF 
- If the timer status is currently off press ON 

You will see the timer status change and flash to confirm it has been overridden.

The time clock will return to the program at the next programmed time.

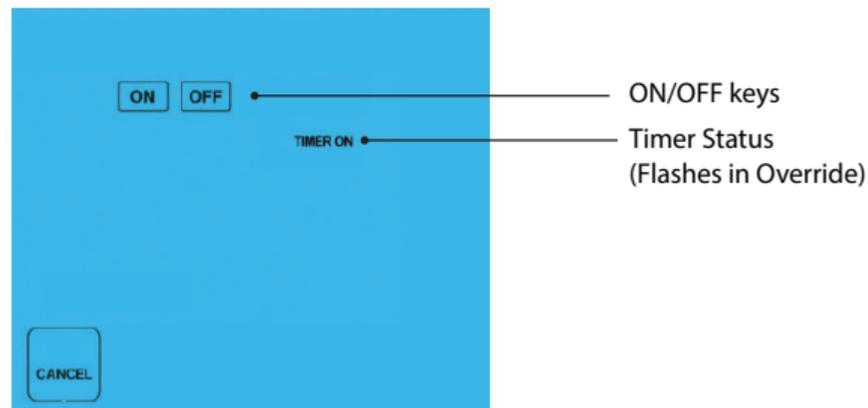

To cancel the Override, repeat the steps above.



Optional Features Explained

THE FOLLOWING SETTINGS ARE OPTIONAL AND IN MOST CASES NEED NOT BE ADJUSTED

Feature 06 – Not used on this model.

Feature 12 - Programming Mode: This function allows you to select between 5/2 Mode, 7 Day mode or Countdown timer.



Optional Settings - Feature Table


FEATURE	DESCRIPTION	SETTING
06	Comms. Address	Not used on this model
12	Programming Mode	00 = Weekday/Weekend (Default) 01 = 7 Day Programming 02 = Countdown mode



Adjusting the Optional Settings

To adjust the optional settings, follow these steps.

- Press PROG 
- Press SETUP 

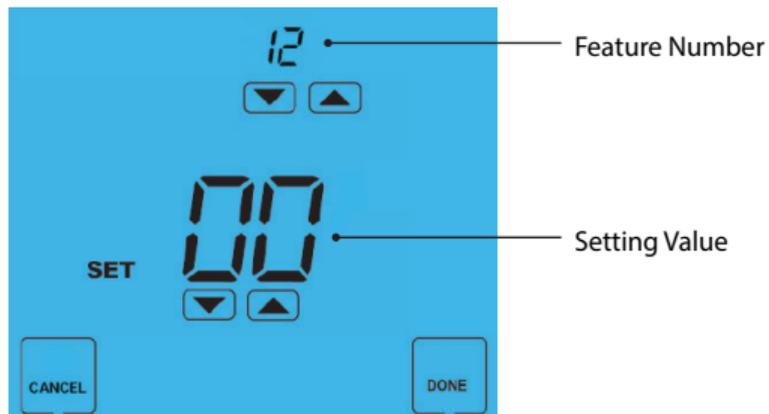

- Use the Up/Down keys at the top of the screen to select the feature number (shown on page 21) and then use the Up/Down keys in the center to adjust the setting 
- Press DONE to confirm settings and exit 




Factory Reset

The thermostat has a reset function to restore all settings to their factory defaults.


To perform a factory reset, follow these steps.

- Press & hold the OFF key to turn the thermostat display OFF
- Press and hold the bottom left corner of the LCD for 10 seconds.
- All of the screen icons will appear for 2 seconds and then disappear.
- Press the ON key once to turn the thermostat display back ON

All icons displayed simultaneously.

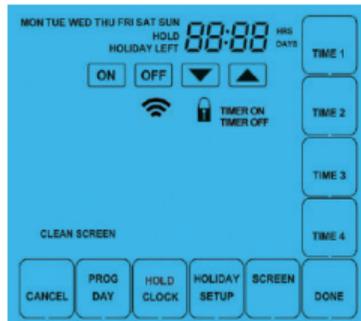


Factory reset is complete.

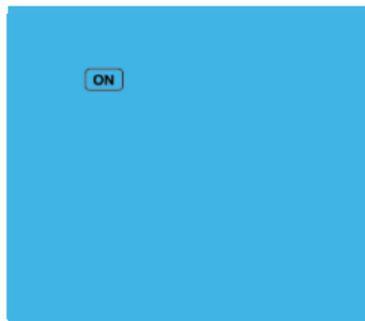

Wiring Diagram

TM1-TS WiFi Switched Live Output

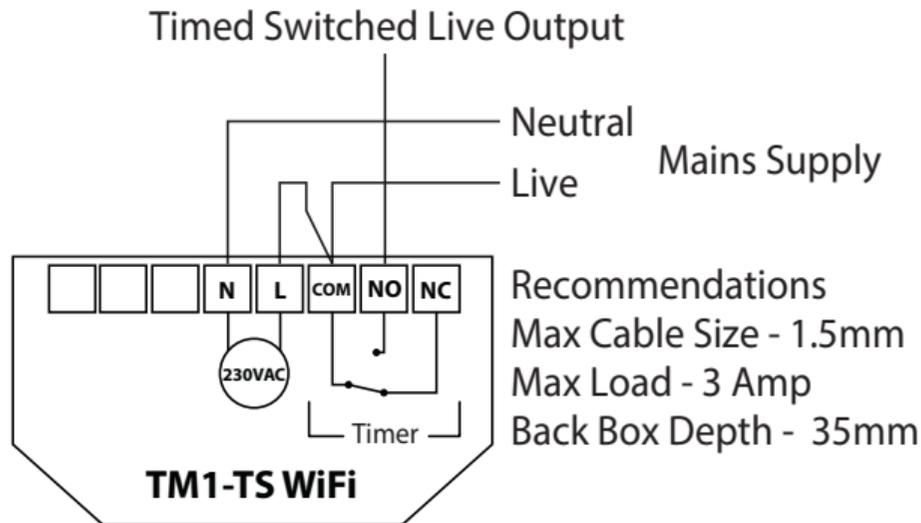



Heating Professionals:
Request a copy of our product installation guide containing detailed technical specifications for our complete product range:
www.heatmiser.com/guide

Want More Information?

Call our support team on: +44 (0)1254 669090

Or view technical specifications directly on our website:
www.heatmiser.com



PDF



FAQ



Twitter: [heatmiseruk](https://twitter.com/heatmiseruk)



Facebook: facebook.com/thermostats